

A stylized, handwritten-style logo for 'CLIX' in a vibrant red color. The letters are thick and fluid, with the 'C' and 'L' being particularly prominent.

MATRIX KEYBOARDS

 
CLIX KEYBOARD

USER MANUAL



BASIC KEYBOARD FUNCTIONS

◆ C - COPY	◆ P - PRINT	◆ [- DECREASE FONT SIZE
◆ X - CUT	◆ A - SELECT ALL	◆] - INCREASE FONT SIZE
◆ V - PASTE	◆ F - FIND	◆ SCROLL WHEEL - INC. OR DEC, FONT
◆ Z - UNDO	◆ O - OPEN	HOLD CTRL + CORRESPONDING KEY
◆ Y - REDO	◆ S - SAVE	
◆ R - REFRESH	◆ N - NEW	
◆ ALT + FN + M - CTRL + ALT + DELETE		
◆ BACKSPACE - DELETES PREV. WORD		

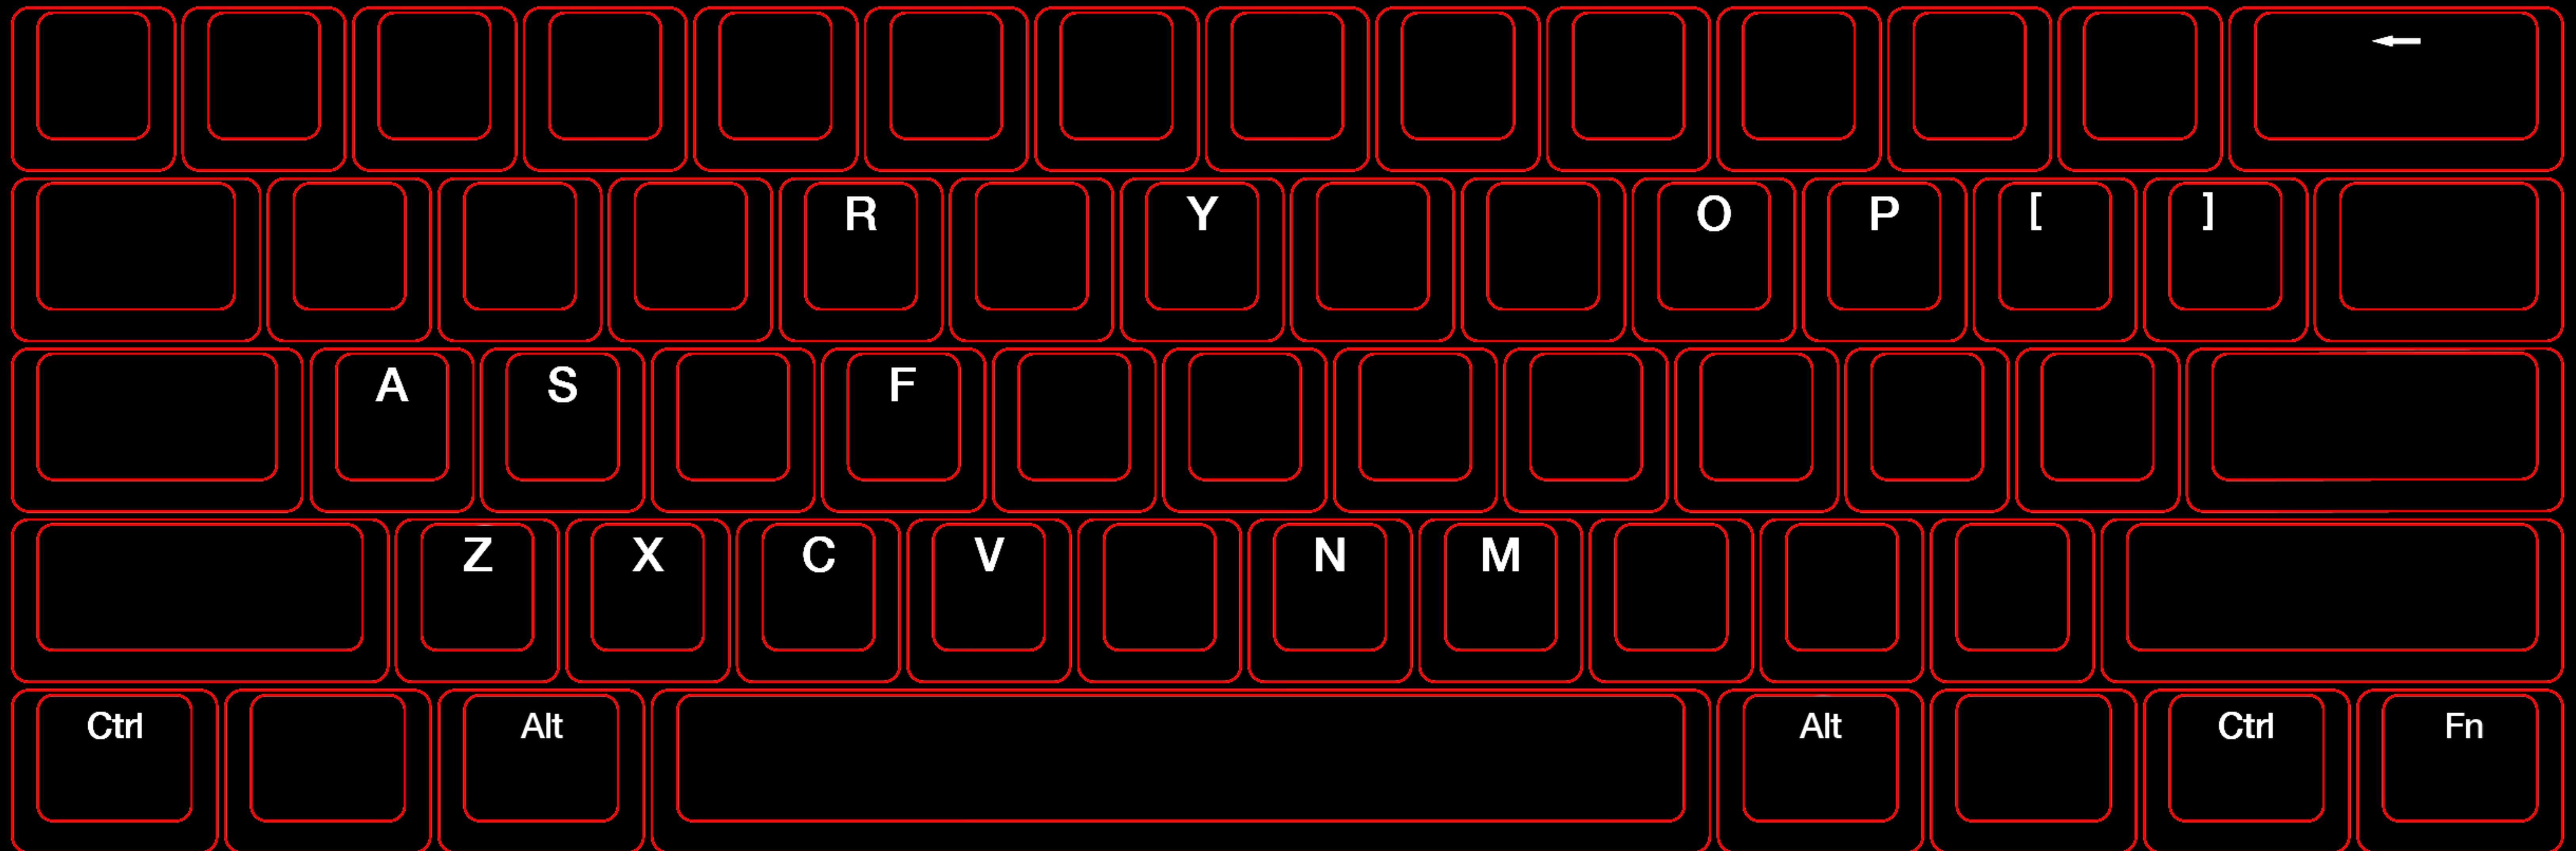



FUNCTIONS AND FUNCTION LOCK

PRESS FN + CORRESPONDING KEY
FN + E FOR COMMAND ONLY LOCK
REPEAT TO TURN OFF OR FN + Q

◆ 1 - F1	◆ 2 - F2
◆ 3 - F3	◆ 4 - F4
◆ 5 - F5	◆ 6 - F6
◆ 7 - F7	◆ 8 - F8
◆ 9 - F9	◆ 0 - F10
◆ -(MINUS) - F11	◆ = - F12
◆ / - ?	◆ ALT - /
◆ MENU - RIGHT CLICK	






COMMANDS AND COMMAND LOCK

PRESS FN + R CORRESPONDING KEY
FN + R FOR COMMAND ONLY LOCK
REPEAT TO TURN OFF OR FN + Q

◆ U - PRINT SCREEN	◆ K - HOME
◆ I - SCROLL LOCK	◆ L - PAGE UP
◆ J - INSERT	◆ M - DELETE
◆ . - PAGE DOWN	◆ , - END
◆ O - PAUSE/BREAK	

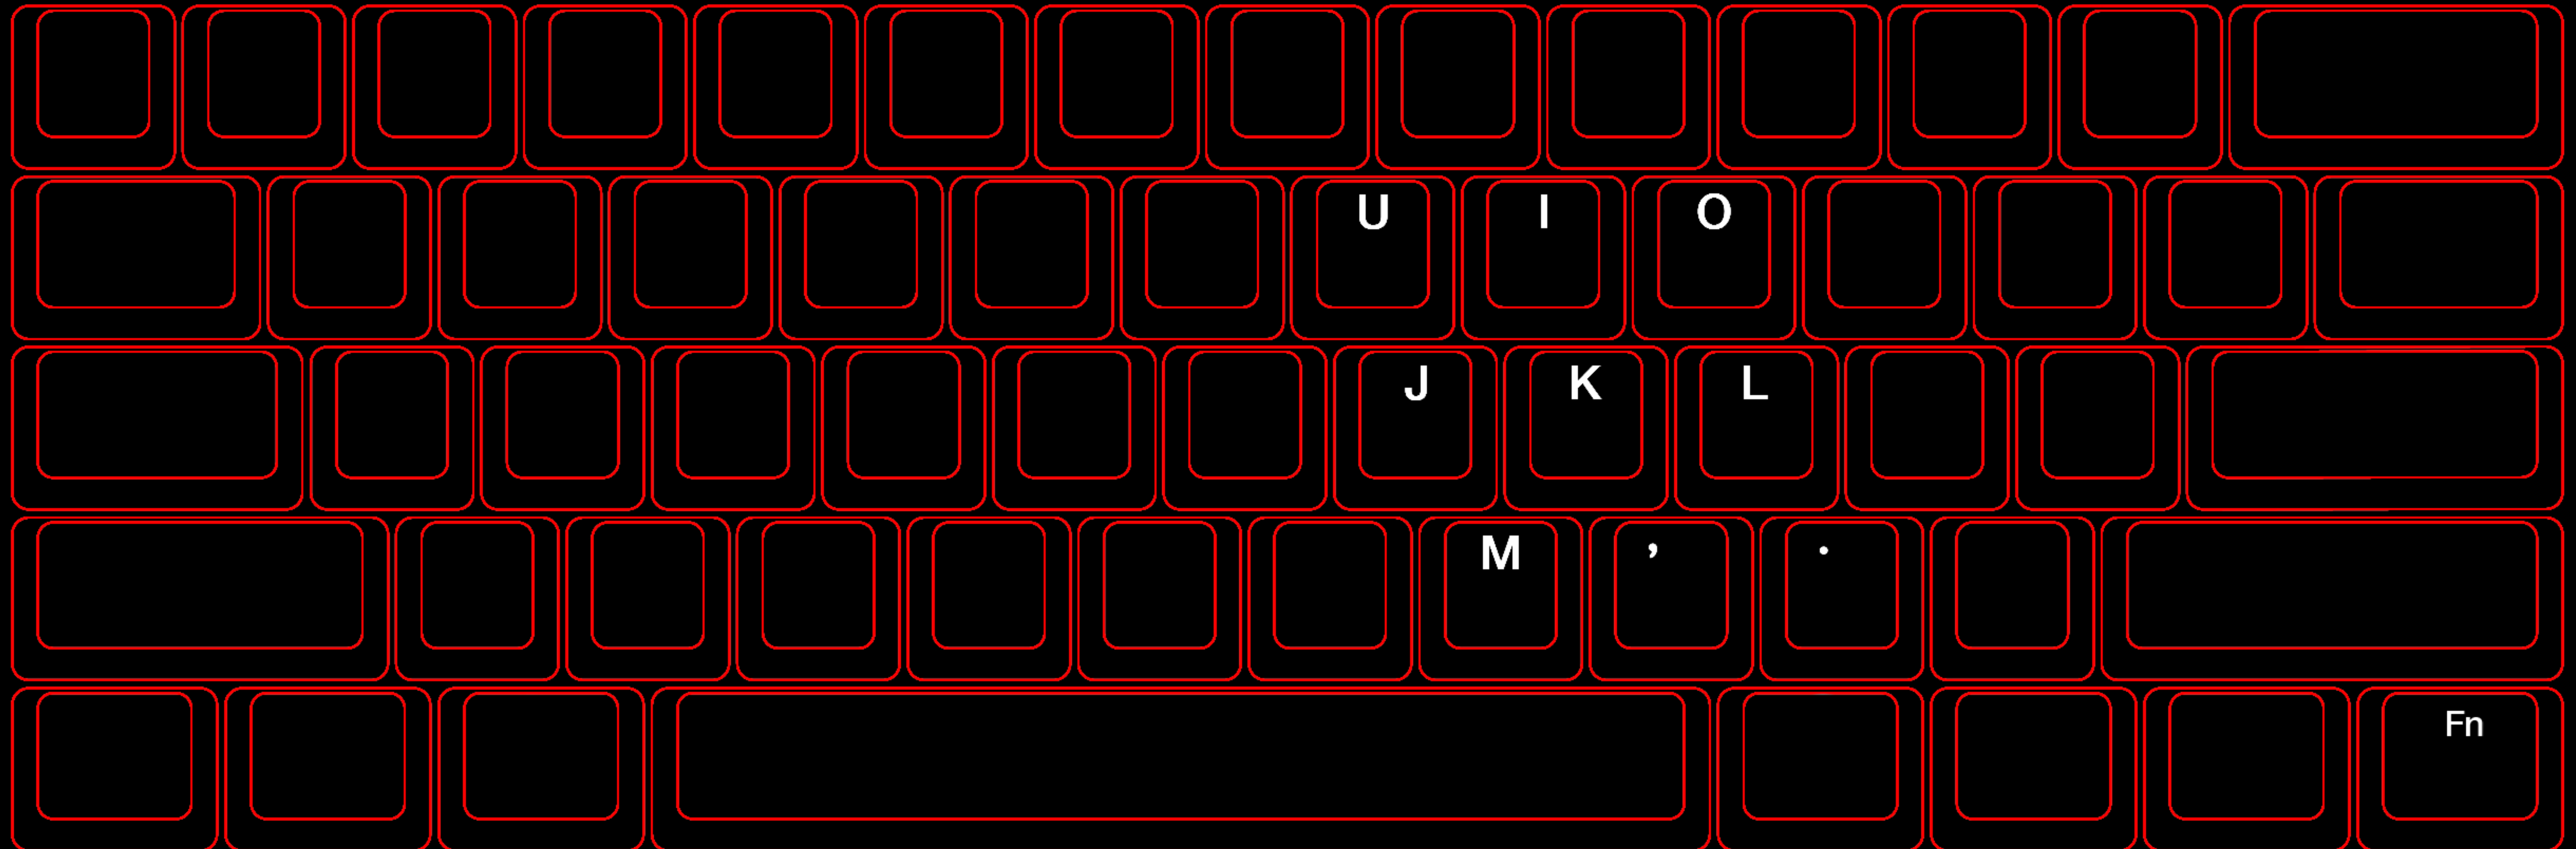 




RGB FUNCTIONS

PRESS FN +] FOR LIGHT CYCLE

* INDICATES CYCLE LIGHT FUNCTION

PRESS FN + BACKSPACE TO TURN OFF

 ◆ SINGLE KEY*
◆ PRESSED KEY ROW*
◆ SOUND VISUALIZER*
◆ RIPPLE FROM PRESSED KEY*
◆ FN + [- BRIGHTNESS UP
◆ FN + P - BRIGHTNESS DOWN
◆ FN + ; - LIGHT SPEED SLOWS
◆ FN + ' - LIGHT SPEED FASTER

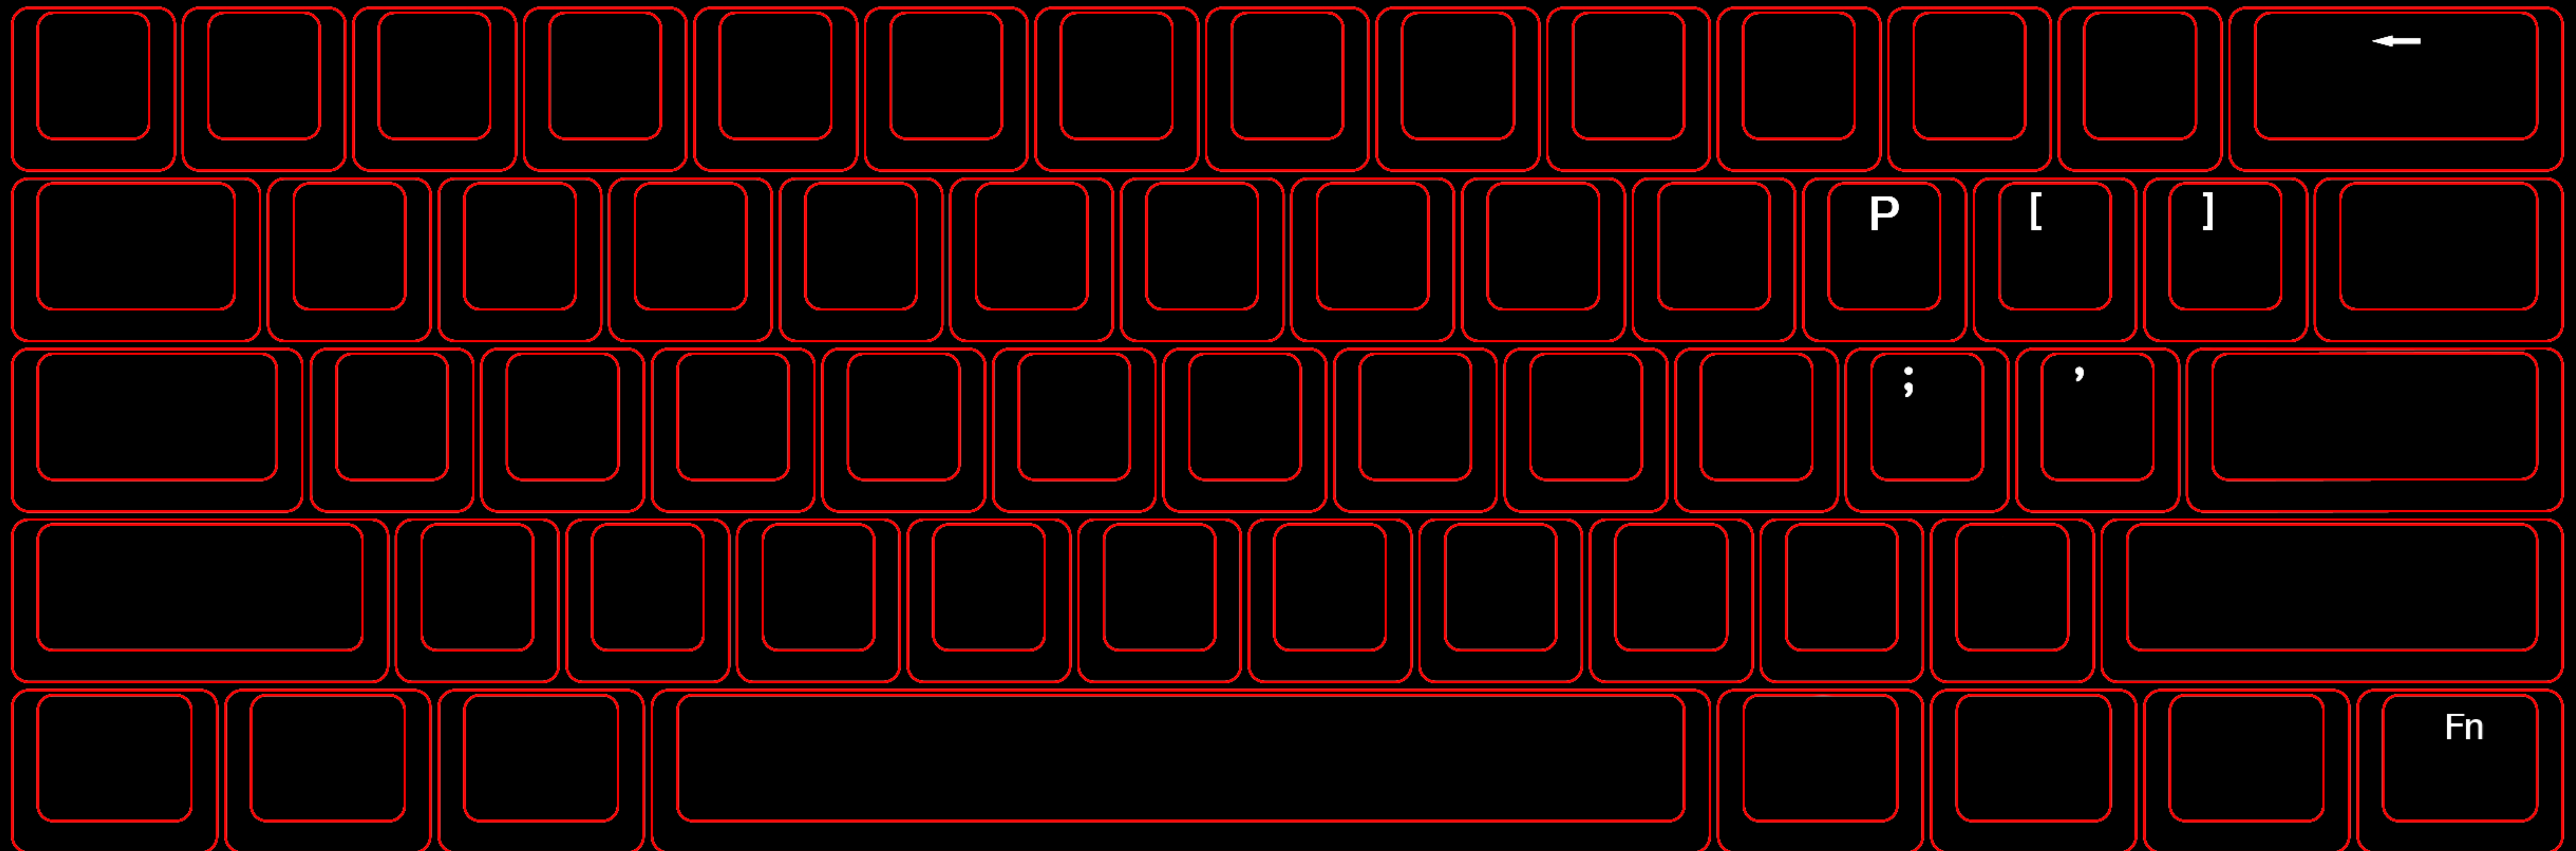




RGB FUNCTIONS (CONTINUED)

PRESS FN +] FOR LIGHT CYCLE

* INDICATES CYCLE LIGHT FUNCTION

PRESS FN + BACKSPACE TO TURN OFF

 ◆ SOLID COLOR*
◆ FULL KEYBOARD CHANGES COLOR*
◆ WAVE FROM RIGHT TO LEFT*
◆ SPIN FROM CENTER*
◆ WAVE FROM BOTTOM TO TOP*
◆ FN + [- BRIGHTNESS UP
◆ FN + P - BRIGHTNESS DOWN
◆ FN + ; - LIGHT SPEED SLOWS
◆ FN + ' - LIGHT SPEED FASTER

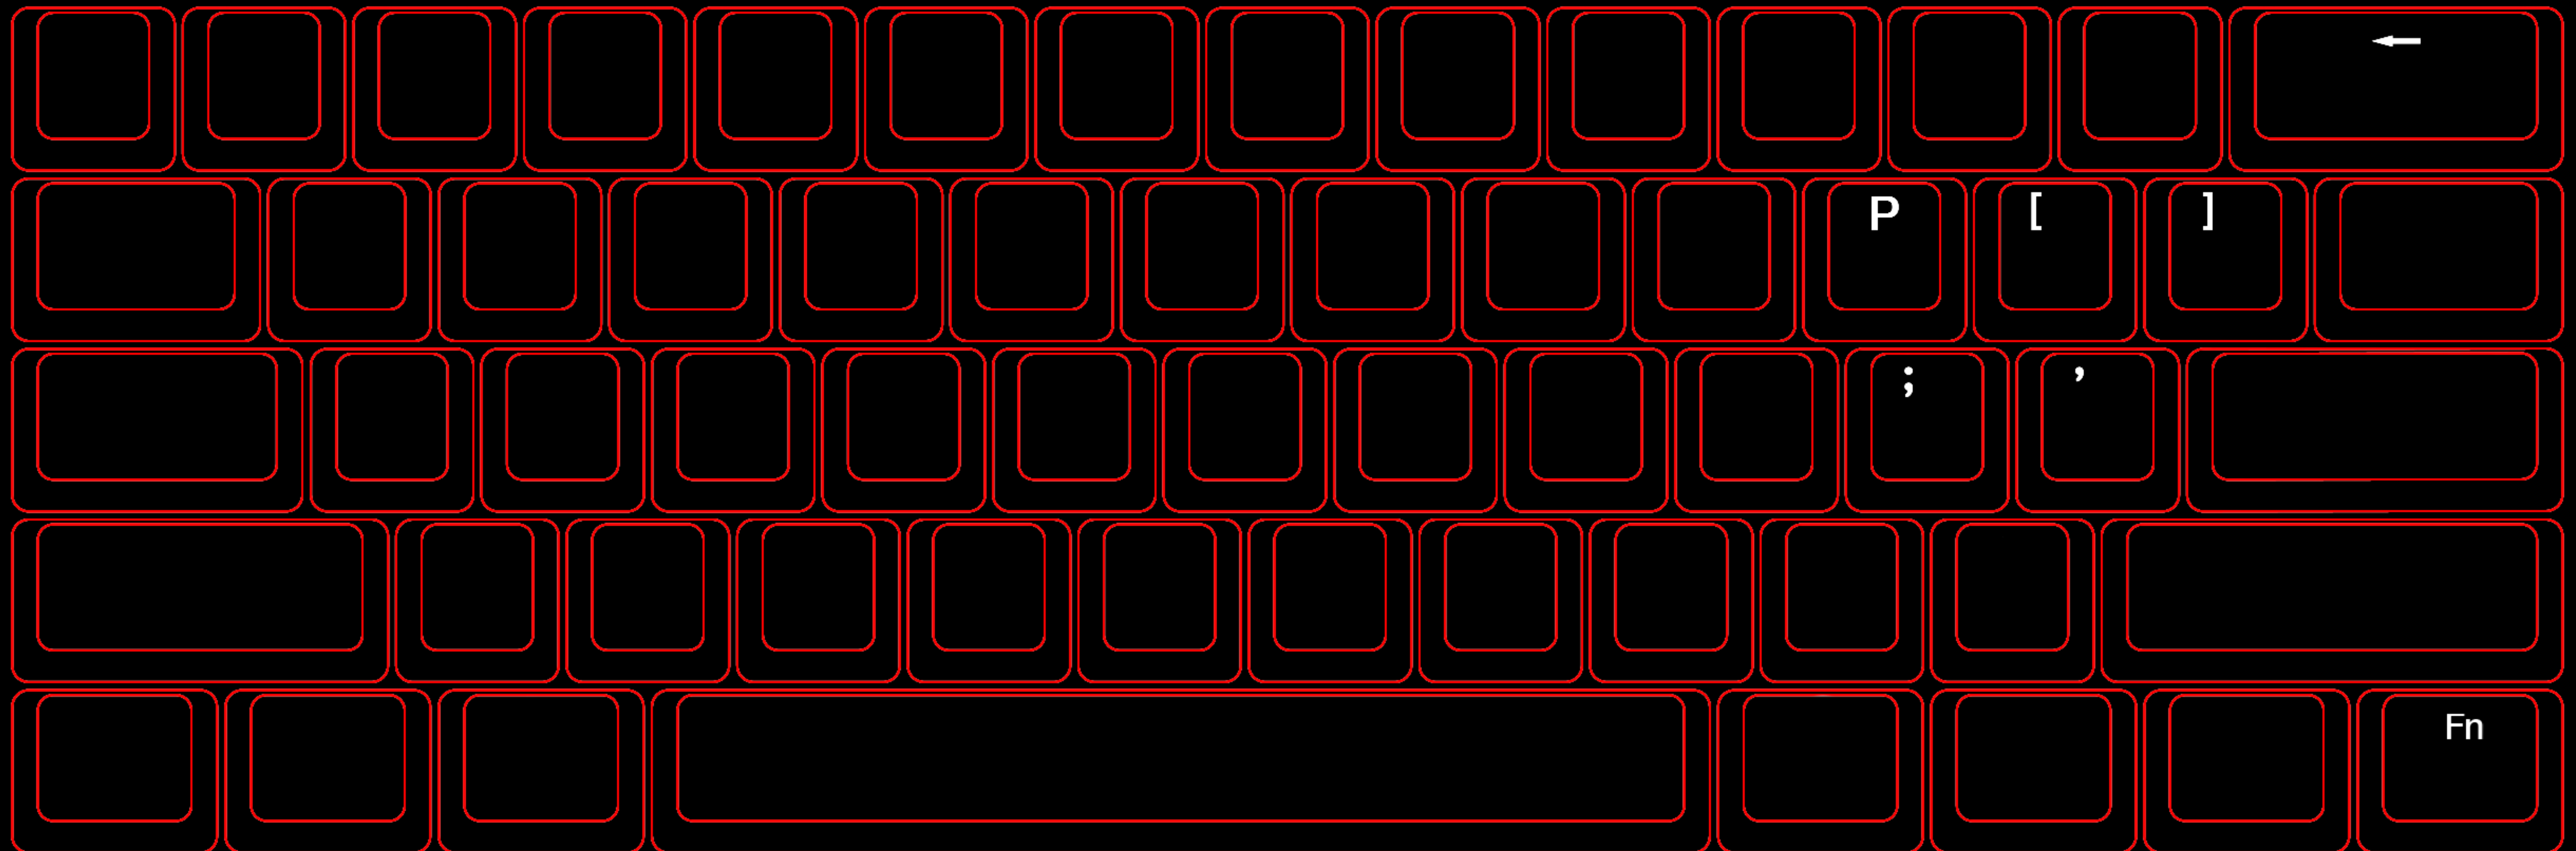



ARROW KEYS

PRESS FN + THE CORRESPONDING KEY

FN + W FOR ARROW ONLY LOCK

 
REPEAT TO TURN OFF OR FN + Q

♦ / - UP ARROW

♦ ALT - LEFT ARROW

♦ MENU - DOWN ARROW

♦ CTRL - RIGHT ARROW

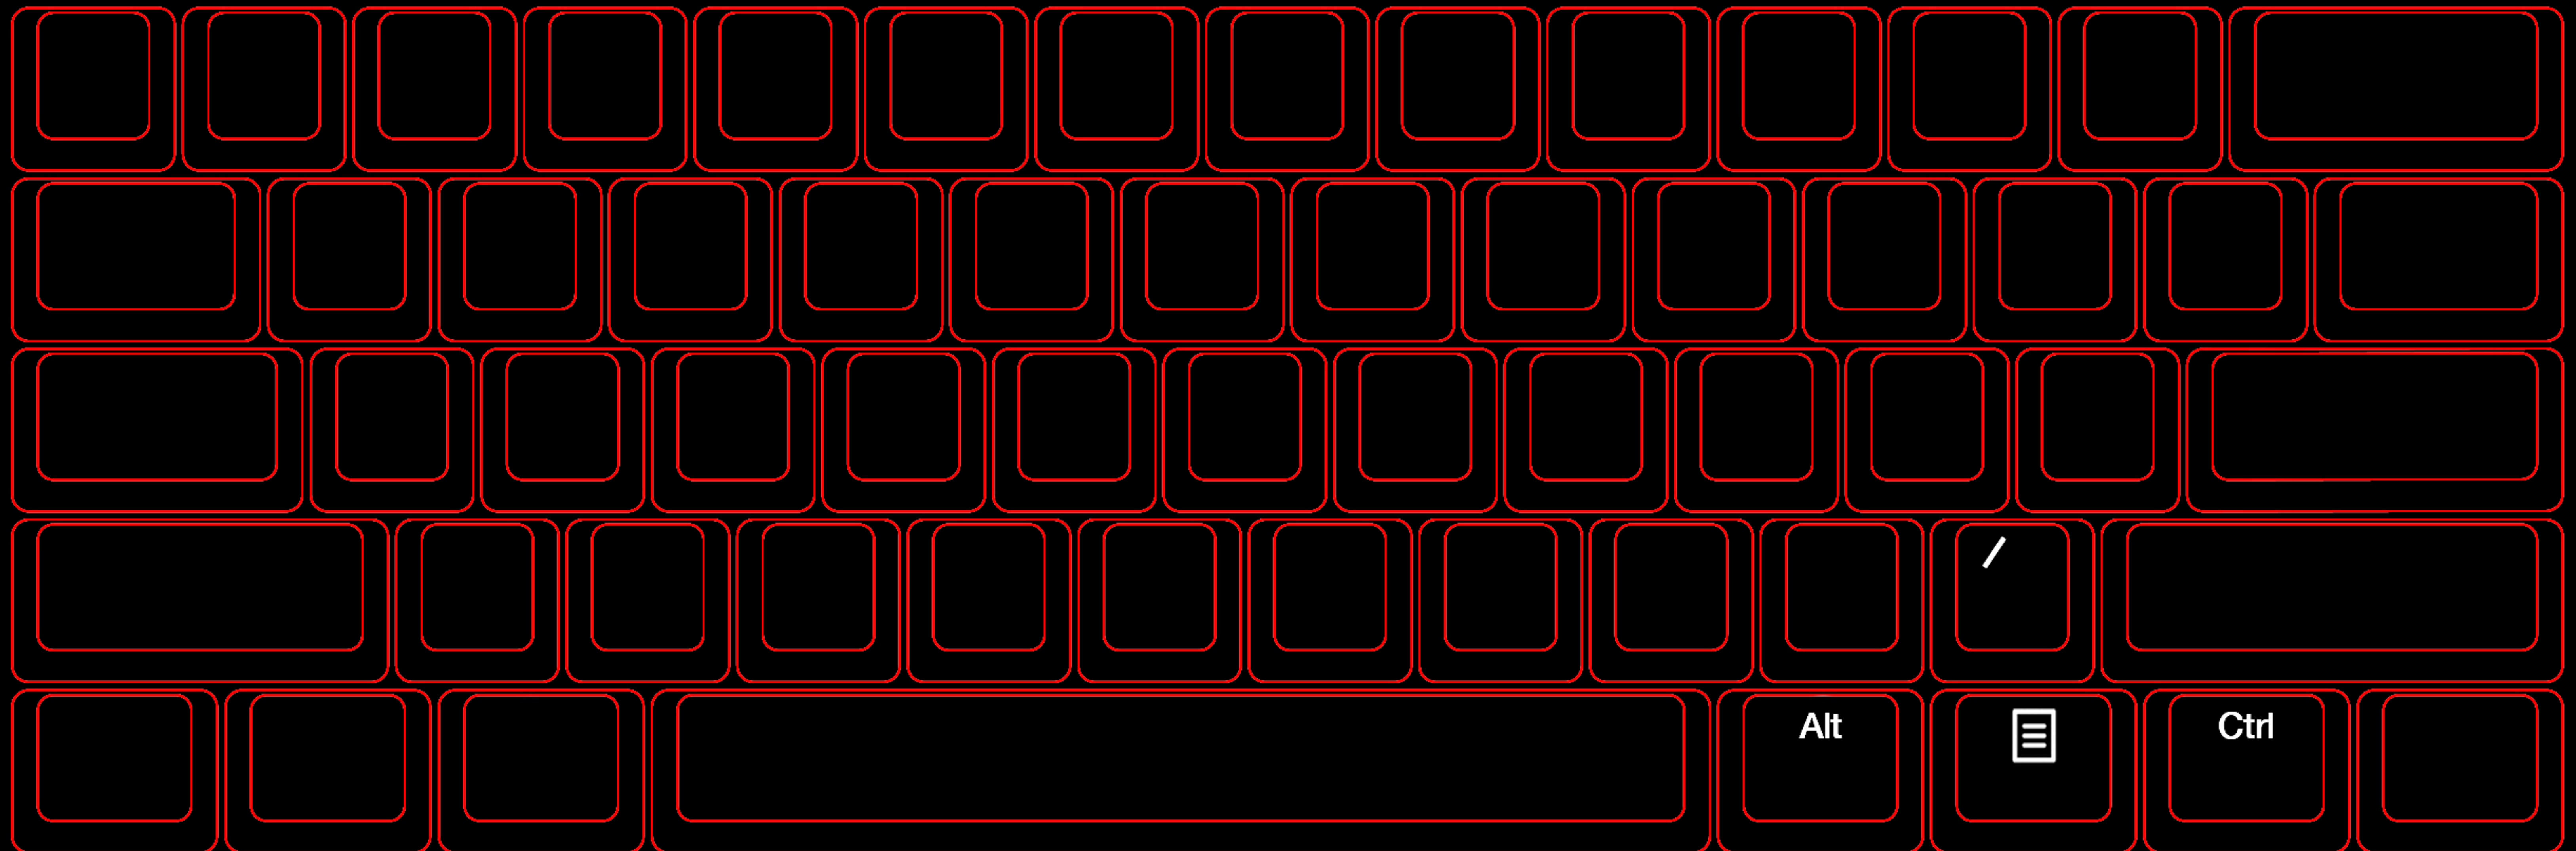



MISCELLANEOUS FUNCTIONS

PRESS FN + THE CORRESPONDING KEY

FN + W FOR ARROW ONLY LOCK

REPEAT TO TURN OFF OR FN + Q

◆ WIN KEY - DISABLES WIN KEY

◆ ESC - GRAVE ACCENT (`)

◆ SHIFT + ESC - TILDE (~)

